




● How to install solar star light ST2-80/100?

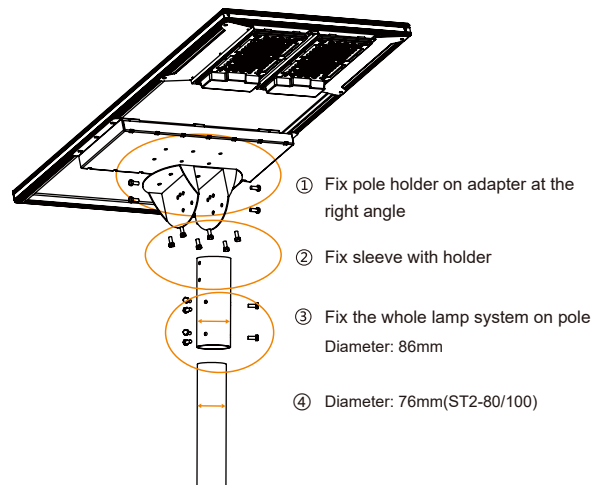


PS:

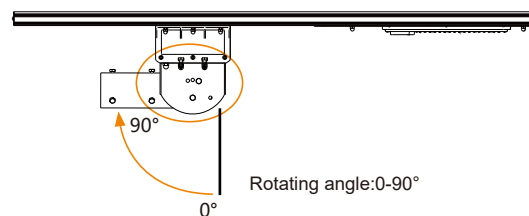


Solar Star Light the plug is protected against reverse connection

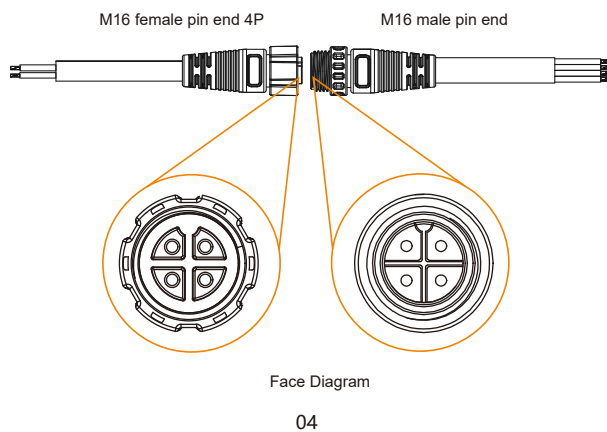

● How to install RSK-60/80/120?

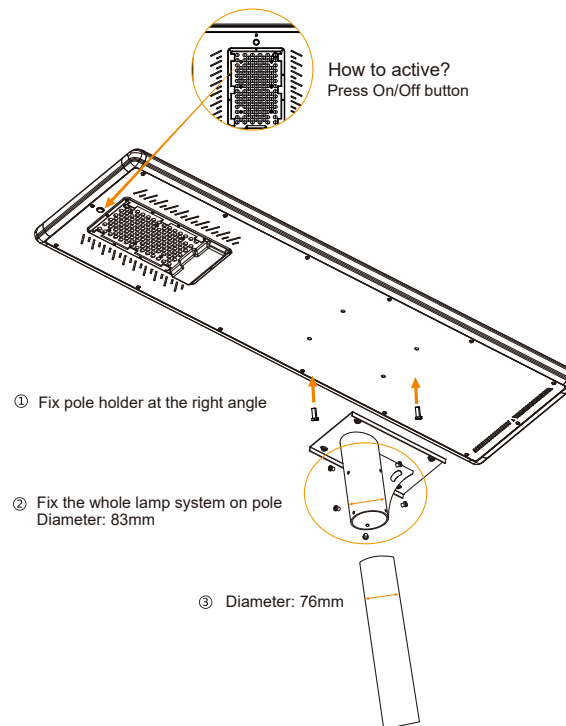

How to install RSK-40?

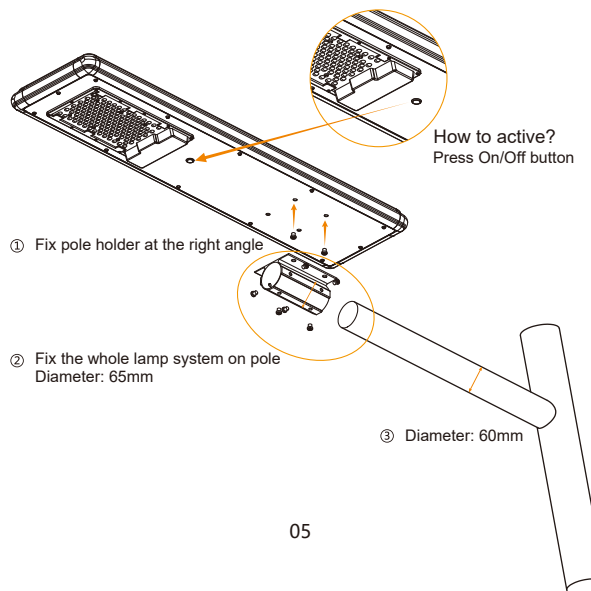

USER MANUAL

All in One Solar Street Light




ST2

RSK

FAQ

How to active Solar Star Light

 1. Connect solar panel to solar controller, light system will light on automatically after 10 seconds if no sunlight above panel. Or press remote controller, it will light on immediately.
2. If you want turn off solar star light, please press "OFF" or disconnect wires.



Attention: Take out plastic card when use it, put inside if do not use it.

Why Solar Star Light do not light on?


1. Make sure activating succeed when first time using.
2. To avoid someone pressed "OFF" accidentally, please press "ON" to test it, if it can light on normally, then press default mode like "L".
3. If still do not light on, please check indicator lights' situation, one indicator light flash means overdischarged. It may caused by objects upon solar panel, please clean it. Or it caused by weak sunlight recently, please check it again after bright sunlight day.
4. If above information still can't solve your problem, please contact sales team directly, we will happy to serve you all the time.

Does it need clean surface of panel?

Yes, it is needed to clean surface regularly according to the gravity of the dust in local city.


Does the lamp light on automatically?

Yes, it will light on automatically at darkness no matter which mode except "OFF"

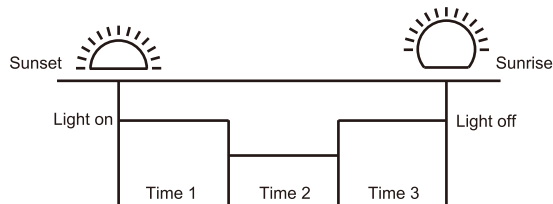


Instruction Light

RSK-60/80/120

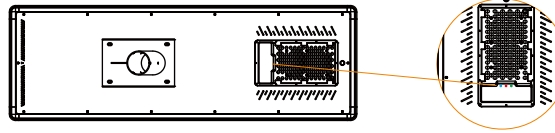

ST2-40/60/80/100/160

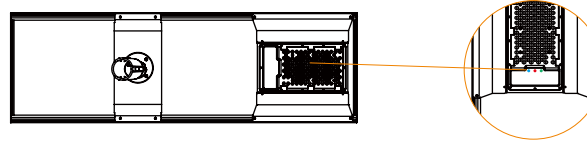

LED light	Indications	Status	Functions
Blue	Charging indication	Long-term On	Be charging
		Long-term Off	Battery full charged
Red	Battery indication	Long-term On	Battery works normally
		Long-term Off	Battery is not connected No power
		Fast twinkling	Battery is over discharged
Green	Load indication	Slow twinkling	Battery full charged
		Long-term On	Load is on
		Long-term Off	Load is off

Working mode

ST2-40/60/80/100

- DEMO: No matter day or night, light "on" for 1 minute. Only for test use.
- OFF: Light "off", no matter day or night.
- L: 100%-2hrs, 70%-2hrs, 30%-dawn.
- T: 100%-3hrs, 50%-2hrs, 20%-6hrs, 50% before dawn 1H.
- M: 100% whole night (Output power reduce).
- U: 100%-2hrs, 70%-2hrs, 50% light when people come, 20% standby after 20 seconds.

ST2-160

RSK-40/60/80/120


- DEMO: No matter day or night, light "on" for 1 minute. Only for test use.
- OFF: Light "off", no matter day or night.
- L: 100%-2hrs, 70%-2hrs, 30%-dawn.
- T: 100%-3hrs, 50%-2hrs, 20%-6hrs, 50% before dawn 1H.
- M: 100% whole night (Output power reduce).
- U: 100%-3hrs, 50%-3hrs.



Note:

1. Default is T mode, once a certain mode was set successfully, it will be reserved until you change other modes with remote control.

How to install solar star light ST2-40/60?

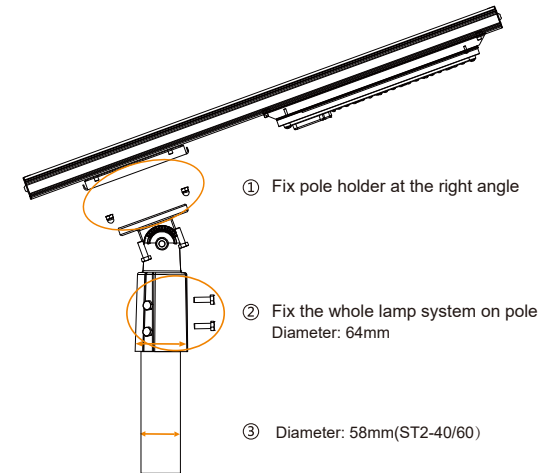

PS:

